

# GlassKeyboard


## 1, Connecting

### Connecting Diagram



## 2, Install Glasskeyboard and Configure

### Base Setup

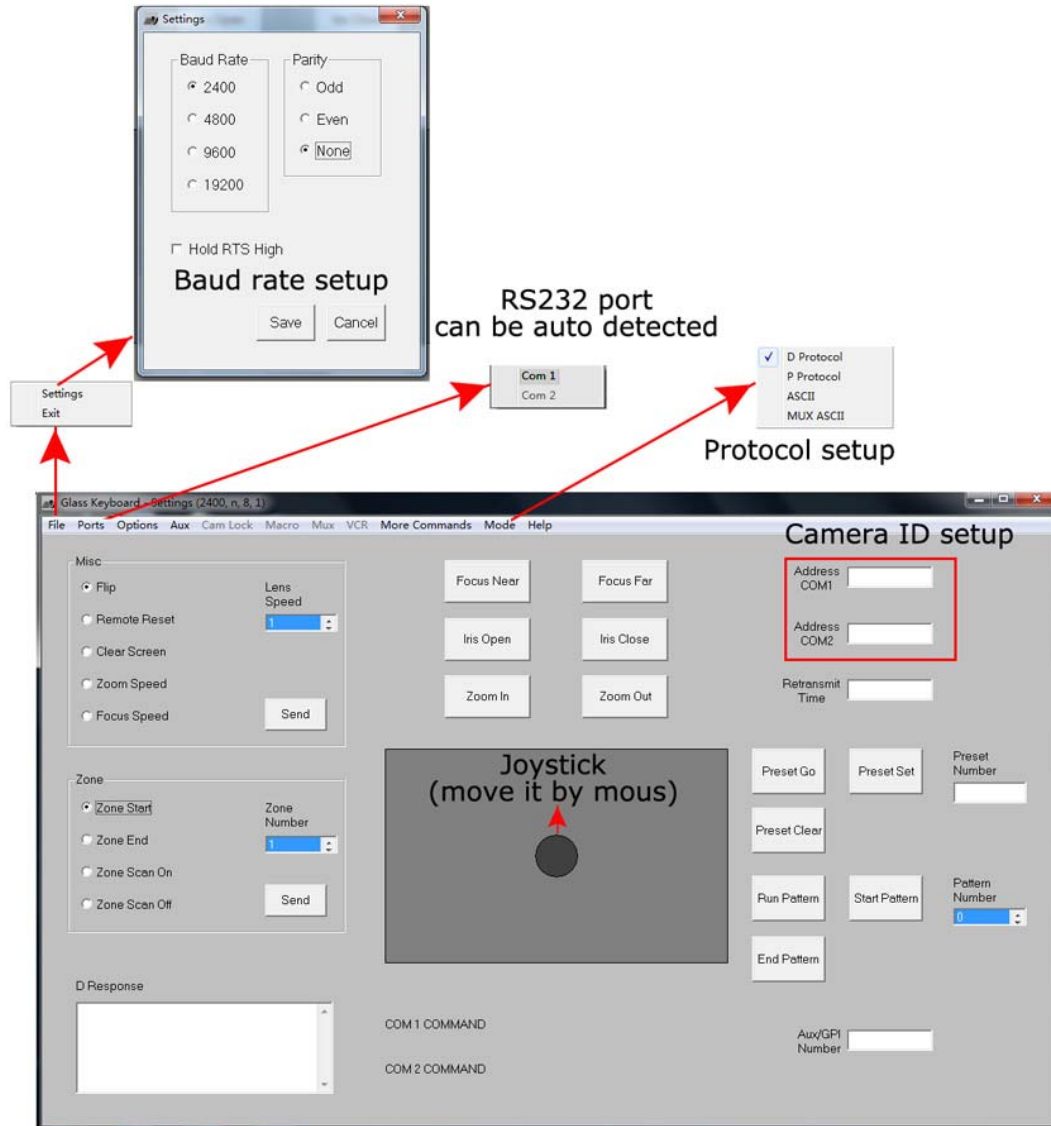

After you configured the protocol, baud rate and camera ID, you can operate the ptz camera to move by mouse, and configure the camera preset